

## Description

ORALITE® Brilliance® Series GP025S is a segmented version of GP025. It is a soft, flexible glass bead reflective trim designed for heat application to garments where comfort and specification compliance are required.

ORALITE® Brilliance® Series GP025S complies with all the requirements for retroreflective material in accordance with ANSI/ISEA 107-2020; and CSA Z96-2022 for Level 2 photometric performance.

## Product Construction

ORALITE® Brilliance® Series GP025S is composed of wide-angle, exposed glass bead microsphere retroreflective elements bonded to a heat activated polyurethane adhesive. The heat activated adhesive is protected by a release film.

## Reflectivity

ORALITE® Brilliance® Series GP025S exceeds the minimum reflectivity requirements of ANSI/ISEA 107-2020, Table 4 and CSA Z96-2022, Level 2.

## Color

ORALITE® Brilliance Series GP025S is available in silver (daytime appearance) with a white reflected color (nighttime appearance).

## Machine Washing

ORALITE® Brilliance® Series GP025S when washed in accordance with ISO 6330:2012, *Textiles - Domestic washing and drying procedures for textile testing*, Method 6N; continue to perform through 50 cycles at 140°F (60°C). Do Not Dry Clean ORALITE® Brilliance® Series GP025S.


## Application Instructions

There can be considerable variation in the background fabrics, chemical treatments, fusing equipment / methods and equipment in the washing processes; therefore, it is important that these are evaluated for each application. It is the responsibility of the user to test the specific fabric(s) to be sure that the adhesion of ORALITE® GP025S is satisfactory on an ongoing basis before commencing production.

The ORALITE® GP025S is protected by a protective film that is to be removed after its application.

Please contact ORAFOL for the complete application instructions.

## Visual Appearance

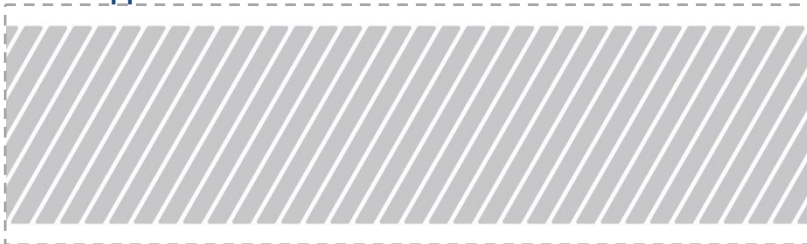

### Note:

All ORALITE® products are manufactured within an ISO 9001:2015 controlled manufacturing environment and batch traceability is possible on the basis of the roll number.

### IMPORTANT NOTICE

All ORALITE® products are subject to careful quality control throughout the manufacturing process and are warranted to be of merchantable quality and free from manufacturing defects. Published information concerning ORALITE® products is based upon research which the Company believes to be reliable although such information does not constitute a warranty. Because of the variety of uses of ORALITE® products and the continuing development of new applications, the purchaser should carefully consider the suitability and performance of the product for each intended use, and the purchaser shall assume all risks regarding such use.

All specifications are subject to change without prior notice.



WARNING – This product may expose you to chemicals which are known in the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to – [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

ORALITE® is a trademark of ORAFOL Europe GmbH



ORAFOL Americas – GA  
1100 Oracal Parkway  
Black Creek, GA 31308  
Phone: 888.672.2251

ORAFOL Americas – CT  
120 Darling Drive  
Avon, CT 06001  
Phone: 800.654.7570

ORAFOL Canada  
2831 Bristol Circle  
Oakville, Ontario L6H 6X5  
Phone: 888.727.3374

[reflective-americas@orafol.com](mailto:reflective-americas@orafol.com)

[www.orafol.com](http://www.orafol.com)